

Operating with Beolink 1000

Beolink 1000 does not have as many keys as the Dreambox receiver's original remote control. Thus certain Beolink 1000 keys have got alternative functionality. To get to this **PLAY** has to be pressed first, i.e. **PLAY** followed by 4 on a Beolink 1000 corresponds to HELP on the original remote control.

The table shows how special Beolink 1000 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beolink 1000 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

The receiver is automatically turned on when selecting its source on the TV with Vtape, DVD, Vaux etc.

We call this function **SOURCE**.

There is therefore no physical button on the Beolink 1000 named source.

Beolink 1000 Operation

PLAY	PLAY	OK
GOTO		Video
STOP		TV
STORE		Exit
RECORD		Radio
PLAY	▲	Bouquet+
PLAY	▼	Bouquet-
PLAY	◀	<
PLAY	▶	>
PLAY	1	Menu
PLAY	2	Audio
PLAY	3	Info
PLAY	4	Help
PLAY	5	Text
SOURCE		Power on
SOURCE	STOP	Power off

Beolink 1000 Function

SHIFT	◀	
SHIFT	▶	
SHIFT	▲	
SHIFT	▼	



Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.



Congratulations

With the interface module EXT from www.oneremote.dk connected to your Dreambox receiver/decoder and a Bang & Olufsen TV you can operate the receiver with your Bang & Olufsen remote control terminal.

This user guide tells you how.

Plug and Play

The receiver can be connected directly to a vacant linkequipped AV socket on the Bang & Olufsen TV with the special EXT scart connection cable and adaptor.

The powersupply connects to the Q5 and the mains.

The EXT IR diode is taped underneath the receiver as close as possible to the front and the receiver's own IR receiver.

Following the correct programming of the AV connection the receiver is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

If the Bang & Olufsen TV does not have a vacant useable AV socket a Oneremote AV Selector can be supplied.

Bang & Olufsen Remote Controls

With your beocompatible* receiver connected to a Bang & Olufsen TV you may operate it with your Beolink 1000, 5000, 7000 or Beo4.

With Beo4 the operation is slightly easier. Thus Beo4 is the recommended remote control for this receiver.

Operation in a Beolink Videosystem

In a Bang & Olufsen Beolink videosystem full operability is ensured in all link rooms.

**Beocompatible means that the equipment can be operated with a Bang & Olufsen remote control when connected to a Bang & Olufsen TV.*

Operating with Beo4

Beo4 does not have as many keys as the Dreambox receiver's original remote control. Thus certain Beo4 keys have got alternative functionality. To get to this  has to be pressed first, i.e.  followed by 4 on a Beo4 corresponds to HELP on the original remote control.

The table shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

The receiver is automatically turned on when selecting its source on the TV with Vtape, DVD, Vaux etc. We call this function **SOURCE**.

There is therefore no physical button on the Beolink 1000 named source.

Beo4	Operation	
STOP EXIT	TV Exit	
   	   	Dream Text Info Radio
		OK
   	   	Bouquet+ Bouquet- < / AV > / -/--
   	1 2 3 4	Menu Audio Info Help
SOURCE	SOURCE STOP	Power on Power off